

ENR 2. AIR TRAFFIC SERVICES AIRSPACE


ENR 2.1 FIR, UIR, TMA

<i>Name</i> <i>Lateral limits</i> <i>Vertical limits</i> <i>Class of airspace</i>	<i>Unit providing service</i>	<i>Call sign</i> <i>Languages</i> <i>Area and conditions of use</i> <i>Hours of service</i>	<i>Frequency/ Purpose</i>	<i>Remarks</i>
1	2	3	4	5
<p>MONTEVIDEO FIR</p> <p>Join the following points in succession: From 301500S/0573700W along Brazil-Uruguay borderline and from there to 335300S/0532300W - 340000S/0530000W - 340000S/0100000W - 390000S/0100000W - 390000S/0443000W - 400000S/0450000W - 360000S/0545000W - 345300S/0570600W - 343500S/0575000W - 340000S/0582400W - 335000S/0583100W - 330200S/0582400W - 312300S/0575900W - 301500S/0573700W.</p> <p style="text-align: center;"><u>UNL</u> GND</p> <p>Class of airspace: G except CTA</p>	<p>Montevideo ACC</p>	<p>Montevideo Control Spanish, English</p>	<p>128.5 MHZ ☛ 126.3 MHZ</p>	
<p>MONTEVIDEO CONTROL AREA (CTA)</p> <p>Comprised between the following points in succession: from 301500S/0573700W along Brazil-Uruguay borderline and from there to:</p>	<p>Montevideo ACC</p>	<p>Montevideo Control Spanish, English</p>	<p>128.5 MHZ ☛ 126.3 MHZ</p>	

<i>Name</i> <i>Lateral limits</i> <i>Vertical limits</i> <i>Class of airspace</i>	<i>Unit providing service</i>	<i>Call sign</i> <i>Languages</i> <i>Area and conditions of use</i> <i>Hours of service</i>	<i>Frequency/ Purpose</i>	<i>Remarks</i>
1	2	3	4	5
<p>335300S/0532300W, 340000S/0530000W, 340000S/0513320W, 364530S/0531147W, 360000S/0545000W, 345300S/0570600W, 343500S/0575000W, 340000S/0582400W, 335000S/0583100W, 330200S/0582400W, 312300S/0575900W, 301500S/0573700W.</p> <p><u>UNL</u> GND</p> <p>Class of airspace:</p> <p>A - above FL 195 to UNL C - above FL 085 to FL 195 G - from GND to FL 085 F - 30 NM arc centred at ARP SUSO between FL 035 and FL 085 F - 30 NM arc centred at SURV ARP between FL 035 and FL 085 F - 30 NM centred at 342705S/0574601W between FL 035 and FL 085</p>	<p>Montevideo ACC</p>	<p>Montevideo Control Spanish, English</p>	<p>128.5 MHZ 126.3 MHZ</p>	<p>Except the CTR, FIZ and TMA.</p>
<p>MONTEVIDEO OCEANIC SECTOR</p> <p>Area comprised between the following points: 340000S/0513320W, 340000S/0420000W, 400000S/0450000W, 364530S/0531147W y 340000S/0513320W.</p> <p><u>UNL</u> MSL</p> <p>Class of airspace: G</p>	<p>Montevideo ACC</p>	<p>Montevideo Control Spanish, English</p>	<p>128.5 MHZ 126.3 MHZ</p>	<p>Alternate communication Montevideo ACC, phone (598) 26040295</p>


<i>Name</i> <i>Lateral limits</i> <i>Vertical limits</i> <i>Class of airspace</i>	<i>Unit providing service</i>	<i>Call sign</i> <i>Languages</i> <i>Area and conditions of use</i> <i>Hours of service</i>	<i>Frequency/ Purpose</i>	<i>Remarks</i>
1	2	3	4	5
<p align="center">MONTEVIDEO EASTERN SECTOR</p> <p>Area comprised between the following points: 340000S/0420000W, 340000S/0100000W, 390000S/010000W, 390000S/0443000W and 340000S/0420000W</p> <p align="center"><u>UNL</u> MSL</p> <p>Class of airspace: G</p>	<p>Montevideo ACC</p>	<p>Montevideo Control Spanish, English</p>	<p>128.5 MHZ 126.3 MHZ</p>	<p>Alternate communication Montevideo ACC, phone (598) 26040295</p>
<p align="center">RVSM AIRSPACE</p> <p>Overlaps with Montevideo FIR</p> <p align="center"><u>FL 410</u> <u>FL 290</u></p> <p>Class of airspace: A - Above FL 290 to FL 410 G - Inside Montevideo Eastern sector. G - Inside Montevideo Oceanic sector</p>	<p>Montevideo ACC</p>	<p>Montevideo Control Spanish, English</p>	<p>128.5 MHZ 126.3 MHZ</p>	<p>Minimum vertical separation: 1000 FT</p> <p>Table of cruising levels will be used (see ENR 1.7-5).</p> <p>Alternate communication Montevideo ACC, phone (598) 26040295</p>

<i>Name</i> <i>Lateral limits</i> <i>Vertical limits</i> <i>Class of airspace</i>	<i>Unit providing service</i>	<i>Call sign</i> <i>Languages</i> <i>Area and conditions of use</i> <i>Hours of service</i>	<i>Frequency/ Purpose</i>	<i>Remarks</i>
1	2	3	4	5
<p align="center">CARRASCO TMA</p> <p>Straight line which join the following points (UGIM) 345858S/0565302W up to 343300S/0563200W. 30 NM arc centred at CRR VOR/ DME up to 342000S/0560000W. Straight line up to 342127S/0550546W. 30 NM arc from LDS VOR/DME up to the following points 345200S/0542900W, straight line up to 361000S/0542900W, straight line up to the following points 345900S/0565300W.</p> <p align="center"><u>FL 245</u> GND</p> <p>Class of airspace: A - Above FL 195 up to FL 245 C - Above 600 M up to FL 195 G - From GND up to 600 M</p> <p>See ENR 2.1-7</p>	<p>Carrasco APP</p>	<p>Carrasco Approach Spanish, English</p>	<p>119.2 MHZ 120.2 MHZ</p>	<p>Except the CTR and FIZ</p>

<i>Name</i> <i>Lateral limits</i> <i>Vertical limits</i> <i>Class of airspace</i>	<i>Unit providing service</i>	<i>Call sign</i> <i>Languages</i> <i>Area and conditions of use</i> <i>Hours of service</i>	<i>Frequency/ Purpose</i>	<i>Remarks</i>
1	2	3	4	5
				

**INTENTIONALLY
LEFT BLANK**

AIRSPACE CLASSIFICATION

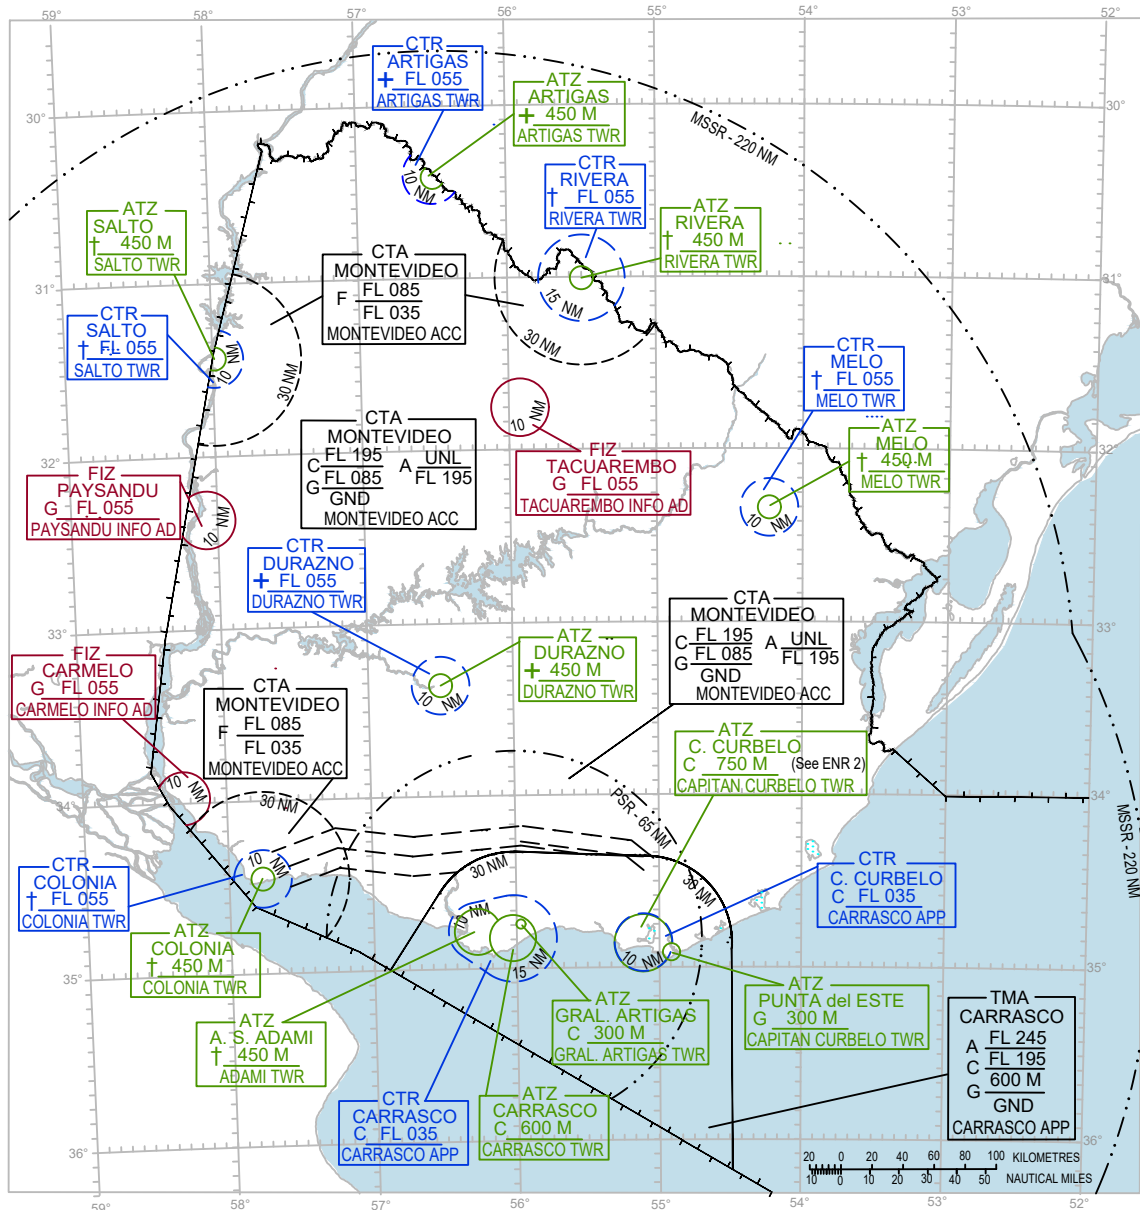

Change:
TMA Durazno eliminated; Durazno CTR modified; new Durazno ATZ

From FL 085 up to FL 195, airspace class C.
From GND up to FL 085, airspace class G.

C	FL 195
G	FL 085
	GND

From GND up to 600 M, airspace class C.

ATZ	CARRASCO
C	600 M
	CARRASCO TWR

MONTEVIDEO OCEANIC SECTOR
MONTEVIDEO EASTERN SECTOR G UNL
MSL

MSSR ... Monopulse Secondary Surveillance Radar

Monday to Friday (except holidays) from 10:00 to 22:00 UTC: Class "C"; Others: Class "G"	*
Monday to Friday (except holidays) from 11:00 to 23:00 UTC: Class "C"; Others: Class "G"	±
Monday to Sunday from 10:00 to 22:00 UTC: Class "C"; Others: Class "G"	†
Monday to Friday from 10:00 to 22:00 UTC: Class "C"; Others: Class "G"	+

**INTENTIONALLY
LEFT BLANK**

2.2 OTHER REGULATED AIRSPACE

<i>Name</i> <i>Lateral limits</i> <i>Vertical limits</i> <i>Class of airspace</i>	<i>Unit providing service</i>	<i>Callsign</i> <i>Languages</i> <i>Area and conditions of use</i> <i>Hours of service</i>	<i>Frequency/ Purpose</i>	<i>Remarks</i>
1	2	3	4	5
<p>ARTIGAS CTR</p> <p>CTR arc, radius 10 NM (18.5 Km) centred at 302357S/0563039W</p> <p><u>FL 055</u> GND</p> <p>Class of airspace: ● from Monday to Friday from 10:00 to 22:00 UTC: "C"; others: "G".</p>	<p>Artigas TWR</p>	<p>Artigas Tower Spanish</p>	<p>122.1 MHZ</p>	
<p>CAPITÁN CURBELO CTR</p> <p>CTR arc, radius 10 NM (18.5 KM) centred at LDS VOR/DME.</p> <p><u>FL 035</u> GND</p> <p>Class of airspace: C</p>	<p>Carrasco APP</p>	<p>Carrasco Approach Spanish, English</p>	<p>119.2 MHZ 120.2 MHZ</p>	
<p>CARRASCO CTR</p> <p>CTR arc, radius 15 NM (27.8 KM) centred at CRR VOR/DME clockwise from 343511S/0560444W up to 350217S/0561158W, straight line up to 345534S/0562246W, CTR arc radius 10 NM (18.5 KM) centred at ASI NDB clockwise up to 343731S/0561754W and straight up to 343511S/0560444W.</p> <p><u>FL 035</u> GND</p> <p>Class of airspace: C</p>	<p>Carrasco APP</p>	<p>Carrasco Approach Spanish, English</p>	<p>119.2 MHZ 120.2 MHZ</p>	<p>If ZOM 5 were active, it will be excluded from CARRASCO CTR.</p>

<i>Name</i> <i>Lateral limits</i> <i>Vertical limits</i> <i>Class of airspace</i>	<i>Unit providing service</i>	<i>Callsign</i> <i>Languages</i> <i>Area and conditions of use</i> <i>Hours of service</i>	<i>Frequency/ Purpose</i>	<i>Remarks</i>
1	2	3	4	5
<p>COLONIA CTR</p> <p>CTR arc, radius 10 NM (18 KM) centred at 342705S/0574601W</p> <p><u>FL 055</u> GND</p> <p>Class of airspace: from Monday to Sunday from 10:00 to 22:00 UTC: "C"; others: "G".</p>	<p>Colonia TWR</p>	<p>Colonia Tower Spanish, English (O/R)</p>	<p>120.8 MHZ 122.1 MHZ</p>	<p>Inside Montevideo FIR</p>
<p>DURAZNO CTR</p> <p>☛ CTR circle, radius 10 NM (18 KM) centred at DUR VOR/DME</p> <p>☛ <u>FL 055</u> GND</p> <p>Class of airspace: from Monday to Friday from 10:00 to 22:00 UTC: "C"; others: "G".</p>	<p>Durazno TWR</p>	<p>Durazno Tower Spanish, English (O/R)</p>	<p>126.20 MHZ</p>	<p>MIL AD</p>
<p>MELO CTR</p> <p>CTR circle, radius 10 NM (18.5 KM) centred at 322033S/0541319W</p> <p><u>FL 055</u> GND</p> <p>Class of airspace: from Monday to Sunday from 10:00 to 22:00 UTC: "C"; others: "G".</p>	<p>Melo TWR</p>	<p>Melo Tower Spanish</p>	<p>118.6 MHZ 122.1 MHZ</p>	

<i>Name</i> <i>Lateral limits</i> <i>Vertical limits</i> <i>Class of airspace</i>	<i>Unit providing service</i>	<i>Callsign</i> <i>Languages</i> <i>Area and conditions of use</i> <i>Hours of service</i>	<i>Frequency/ Purpose</i>	<i>Remarks</i>
1	2	3	4	5
<p>RIVERA CTR</p> <p>☛ CTR arc, radius 15 NM (27,8 KM) centred at 305810S/0552824W</p> <p><u>FL 055</u> GND</p> <p>Class of airspace: from Monday to Sunday from 10:00 to 22:00 UTC: "C"; others: "G".</p>	<p>Rivera TWR</p>	<p>Rivera Tower Spanish, English (O/R)</p>	<p>118.0 MHZ 122.1 MHZ</p>	<p>☛</p>
<p>SALTO CTR</p> <p>CTR arc, radius 10 NM (18 KM) centred at 312605S/0575903W</p> <p><u>FL 055</u> GND</p> <p>Class of airspace: from Monday to Sunday from 10:00 to 22:00 UTC: "C"; others: "G".</p>	<p>Salto TWR</p>	<p>Salto Tower Spanish, English (O/R)</p>	<p>118.8 MHZ 122.1 MHZ</p>	<p>Inside Montevideo FIR</p>
<p>A.S. ADAMI ATZ</p> <p>ATZ arc, radius 8 NM (14.8 KM) centred at ASI NDB clockwise from 345350S/0561002W up to 344331S/0560716W.</p> <p><u>450 M</u> GND</p> <p>Class of airspace: from Monday to Sunday from 10:00 to 22:00 UTC: "C"; others: "G".</p>	<p>Adami TWR</p>	<p>Adami Tower Spanish, English (O/R)</p>	<p>118.4 MHZ 122.1 MHZ</p>	

<i>Name</i> <i>Lateral limits</i> <i>Vertical limits</i> <i>Class of airspace</i>	<i>Unit providing service</i>	<i>Callsign</i> <i>Languages</i> <i>Area and conditions of use</i> <i>Hours of service</i>	<i>Frequency/ Purpose</i>	<i>Remarks</i>
1	2	3	4	5
<p>ARTIGAS ATZ</p> <p>ATZ arc, radius 4 NM (7.4 KM) centred at 302357S/0563039W</p> <p><u>450 M</u> GND</p> <p>Class of airspace: from Monday to Friday from 10:00 to 22:00 UTC: "C"; others: "G".</p>	<p>Artigas TWR</p>	<p>Artigas Tower Spanish</p>	<p>122.1 MHZ</p>	
<p>CARRASCO ATZ</p> <p>ATZ circle, radius 8 NM (14.8 KM) centred at CRR VOR/DME.</p> <p><u>600 M</u> GND</p> <p>Class of airspace: C</p>	<p>Carrasco TWR</p>	<p>Carrasco Tower Spanish, English.</p>	<p>118.1 MHZ 121.8 MHZ</p>	<p>If ZOM 5 were active, it will be excluded from CARRASCO CTR.</p>
<p>COLONIA ATZ</p> <p>ATZ circle, radius 4 NM (7.4 KM) centred at 342705S/0574601W.</p> <p><u>450 M</u> GND</p> <p>Class of airspace: from Monday to Sunday from 10:00 to 22:00 UTC: "C"; others: "G".</p>	<p>Colonia TWR</p>	<p>Colonia Tower Spanish, English (O/R)</p>	<p>120.8 MHZ 122.1 MHZ</p>	
<p>CURBELO ATZ</p> <p>ATZ circle, radius 10 NM (18.5 KM) centred at LDS VOR/DME, except PUNTA del ESTE ATZ</p> <p><u>750 M</u> GND</p> <p>Class of airspace: C</p>	<p>Capitán Curbelo TWR</p>	<p>Capitán Curbelo Tower Spanish/English</p>	<p>118.3 MHZ 122.1 MHZ</p>	

<i>Name</i> <i>Lateral limits</i> <i>Vertical limits</i> <i>Class of airspace</i>	<i>Unit providing service</i>	<i>Callsign</i> <i>Languages</i> <i>Area and conditions of use</i> <i>Hours of service</i>	<i>Frequency/ Purpose</i>	<i>Remarks</i>
1	2	3	4	5
<p>ATZ DURAZNO</p> <p>☛ ATZ circle, radius 4 NM (7,4 KM) centred at VOR/DME "DUR"</p> <p>☛ <u>450 M</u> ☛ GND</p> <p>☛ Class of airspace: from Monday to Friday from 10:00 to 22:00 UTC: "C"; others: "G".</p>	<p>☛ Durazno TWR</p>	<p>☛ Durazno Tower</p> <p>☛ Spanish, English (O/R)</p>	<p>☛ 126.20 MHZ</p>	<p>☛ MIL AD</p>
<p>GRAL. ARTIGAS ATZ</p> <p>ATZ circle, radius 1.6 NM (3 KM) centred at 344450S/0555740W</p> <p><u>300 M</u> GND</p> <p>Class of airspace: C</p>	<p>Gral. Artigas TWR</p>	<p>General Artigas Tower</p> <p>Spanish</p>	<p>118.5 MHZ</p>	<p>MIL AD</p>
<p>MELO ATZ</p> <p>ATZ circle, radius 4 NM (7.4 KM) centred at 322033S/ 0541319W</p> <p><u>450 M</u> GND</p> <p>Class of airspace: from Monday to Sunday from 10:00 to 22:00 UTC: "C"; others: "G".</p>	<p>Melo TWR</p>	<p>Melo Tower</p> <p>Spanish</p>	<p>118.6 MHZ 122.1 MHZ</p>	
<p>PUNTA del ESTE ATZ</p> <p>ATZ circle, radius 3 NM (5.6 KM) centred at ARP (345447S/ 0545509W).</p> <p><u>300 M</u> GND</p> <p>Class of airspace: G</p>	<p>Nil</p>	<p>Nil</p>	<p>118.7 MHZ</p>	<p>See AD 2.11-9</p>

<i>Name</i> <i>Lateral limits</i> <i>Vertical limits</i> <i>Class of airspace</i>	<i>Unit providing service</i>	<i>Callsign</i> <i>Languages</i> <i>Area and conditions of use</i> <i>Hours of service</i>	<i>Frequency/ Purpose</i>	<i>Remarks</i>
1	2	3	4	5
<p>RIVERA ATZ ATZ arc, radius 4 NM (7.4 KM) centred at 305810S/0552824W.</p> <p><u>450 M</u> GND</p> <p>Class of airspace: from Monday to Sunday from 10:00 to 22:00 UTC: "C"; others: "G".</p>	<p>Rivera TWR</p>	<p>Rivera Tower Spanish, English (O/R)</p>	<p>118.0 MHZ 122.1 MHZ</p>	
<p>SALTO ATZ ATZ arc, radius 4 NM (7.4 KM) centred at 312605S/ 0575903W</p> <p><u>450 M</u> GND</p> <p>Class of airspace: from Monday to Sunday from 10:00 to 22:00 UTC: "C"; others: "G".</p>	<p>Salto TWR</p>	<p>Salto Tower Spanish, English (O/R)</p>	<p>118.8 MHZ 122.1 MHZ</p>	<p>Inside Montevideo FIR</p>
<p>CARMELO FIZ ATZ arc, radius 10 NM (18.5 KM) circle centred at 335758S/0581931W</p> <p><u>FL 055</u> GND</p> <p>Class of airspace: G</p>	<p>Carmelo AFIS</p>	<p>Carmelo Information Spanish</p>	<p>118.0 MHZ 122.1 MHZ</p>	<p>Inside FIR Montevideo</p>
<p>PAYSANDÚ FIZ FIZ arc, radius 10 NM (18.5 KM) centred at 322151S/0580344W</p> <p><u>FL 055</u> GND</p> <p>Class of airspace: G</p>	<p>Paysandú AFIS</p>	<p>Paysandú Information Spanish</p>	<p>118.2 MHZ</p>	<p>Inside Montevideo FIR</p>

<i>Name</i> <i>Lateral limits</i> <i>Vertical limits</i> <i>Class of airspace</i>	<i>Unit providing service</i>	<i>Callsign</i> <i>Languages</i> <i>Area and conditions of use</i> <i>Hours of service</i>	<i>Frequency/ Purpose</i>	<i>Remarks</i>
1	2	3	4	5
TACUAREMBÓ FIZ ● FIZ circle, radius 10 NM (18.5 KM) centred at 314501S/ 0555526W <u>FL 055</u> GND Class of airspace: G	Tacuarembó AFIS	Tacuarembó Information Spanish	122.1 MHZ	

**INTENTIONALLY
LEFT BLANK**